

CLUBSWAN 36

Notice #02/2024

Revised Foil Stop Position

Further to the Class Rule amendment changing the limitation on the foil extension the separation of the existing foil stop blocks may be reduced to 220mm measured along the surface of the foil. (110mm either side of the foil centreline)

The foil stops to be used are the existing stops, if replacement stops are required due to damage whilst removing from the existing position replacement stops may be purchased from ClubSwan Racing.


To install the stops use the same procedure as detailed in the previously issued installation instructions from Persico. (19036_E_004_N_UT_2020-07-29_CS36 foil-up&down bonding)

Extracts of this document and the revised dimensions are detailed below:

The Persico instructions recommend using Spabond 345 (Gurit) to attach the stopper C-Plate.

Distance Between Stopper Contact Faces

Minimum of 220mm - measured along foil surface.

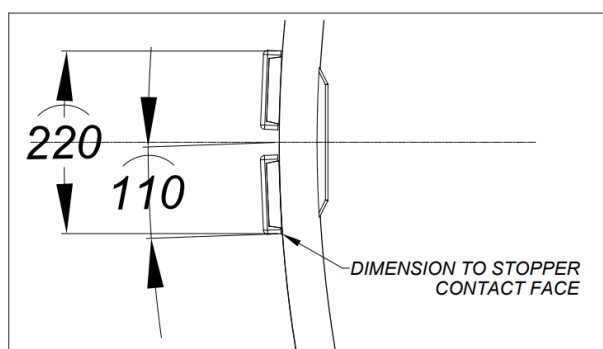

Longitudinally, stoppers need to be placed at the same distance from the leading edge as currently installed, parallel to the leading edge of the foil to align with the existing slot in the central bearing.

